

BuzzOn

Simple, easy-to-use, and the best wireless buzzers for quizzes and other events are available for rent

- Wireless 8-buzzer set
- Easy to carry & set up
- Colour-coded for easy identification
- Lock-in feature to prevent multiple buzz-ins
- Available at **Hyderabad, Visakhapatnam, Chennai, Delhi, Mumbai, Pune, Bengaluru, Bhubaneshwar, Kolkata, and Coimbatore**



Remote Requires
2 AAA Batteries



Rechargeable
Buzzers



Easy to Setup



25 ft (8m Range)



Up to 8 Players

Rent per day: ₹ 5000 + ₹ 3,000

(Refundable
Security Deposit)

Booking & Payment Terms and Conditions

Complimentary buzzers: If TackOn hosts the quiz, we will arrange the buzzers for free.

To reserve a slot, the customer can book the buzzers for the chosen date by paying ₹8,000.

Security Deposit Refund: The ₹3,000 security deposit will be refunded upon return of the buzzers.

Transport charges: The customer is responsible for covering transportation costs.

Number of buzzers: This is a set/box of 8 buzzers. There is no discount for using fewer than eight buzzers.

Cancellation policy:

- A full refund will be issued if the cancellation is more than one week in advance.
- ₹500 will be deducted for cancellations in less than a week to 48 hours before the slot.

How To Use?

Power On: Hold the power button for one second until a square appears on the remote's screen.

Activate Buzzers: Press each buzzer once. They will light up in red.

Start: Click the start button. The buzzers will turn green, indicating they are ready for use. Click on the start button after every question to reset.

Mute Sound: Click on the mute button to mute the buzzer sound.

Continue: Click the continue button to lock the first buzzer and allow other teams to join.

Battery status: Click on the battery button to know the status of the charge left in the buzzers. **Full, 80%, 40%, Low**

Random Selection: Hold "Stop" and click "Start" to begin random blinking. Press "Battery" to select a buzzer. Click "Start" to reset it or "Continue" to lock the selected buzzer and choose another.

Buzzer Charging and Remote Battery: The buzzers light up when charging and turn off when fully charged. To extend the life of your equipment, recharge it every two months. The remote uses two AAA batteries.

Troubleshoot:

- Ensure buzzers are charged if they don't light up.
- If buzzers flash red and green, check the remote's batteries.
- If a buzzer doesn't respond to remote commands, reset it using the "Mode" button as described below.

"Mode" Buzzer Reset:

Ensure all buzzers are off. Turn on the remote and press "Mode" to display "0" on the screen. Use "Continue" and "Mute" to select a buzzer number (1-8), then press "Start" and immediately tap the buzzer four times quickly. If successfully programmed, the buzzer will flash green. Press "Mode" to exit. If it doesn't flash, close the remote and buzzer and try again.



More info @

TackOn.org/buzzon



Contact Us for Content, Quizzes, TV Shows, Web Design and Development

TackOn Knowledge Solutions OPC Pvt Ltd

Phone: [9030707301](tel:9030707301) | [9032705011](tel:9032705011) | bvishnu@tackon.org,

sahith@tackon.org